

» NOVOS 3 INC RS485 BACnet

Room operating unit temperature, optional with humidity | CO2 | VOC

thermokon[®]
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alteration
Issue date: 26.08.2020 • A120



With design cover (left), standard design w/o design cover (right)

» APPLICATION

Room operating unit for setpoint- / fan stage adjustment, presence detection and triggering an ECO mode function. The device has up to four integrated sensors to detect room temperature, optional additionally humidity, CO2 or VOC. The setpoint can be adjusted within a predefined range (i.e. -3K...+3K). The current setpoint is shown via seven LEDs. By pressing the encoder the ECO function is activated. All set parameters can be reset via BUS. The maintenance-free sensor creates the conditions for a pleasant indoor climate and well-being. Typical applications are schools, office buildings, hotels, cinemas or similar.

» TYPES AVAILABLE

Room operating unit temperature, optional with relative humidity, CO2 or VOC sensor– active RS485 BACnet

NOVOS 3 INC ECOC



NOVOS 3 INC TD ECO



NOVOS 3 INC FS5 ECO



Note: all devices optionally without symbol (ECO) print available.

» SECURITY ADVICE – CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» REMARKS TO ROOM SENSORS

Location and Accuracy of Room Sensors

The room sensor should be mounted in a suitable location for measuring accurate room temperature. The accuracy of the temperature measurement also depends directly on the temperature dynamics of the wall. It is important, that the back plate is completely flush to the wall so that the circulation of air occurs through the vents in the cover. Otherwise, deviations in temperature measurement will occur due to uncontrolled air circulation. Also the temperature sensor should not be covered by furniture or similar devices. Mounting next to doors (due to draught) or windows (due to colder outside wall) should be avoided. The temperature dynamics of the wall will influence the temperature measurement. Various wall types (brick, concrete, dividing and hollow brickwork) all have different behaviours with regards to thermal variations.

Surface and Flush Mounting

The temperature dynamics of the wall influence the measurement result of the sensor. Various wall types (brick, concrete, dividing and hollow brickwork) have different behaviours with regard to thermal variations. A solid concrete wall responds to thermal fluctuations within a room in a much slower way than a light-weight structure wall. Room temperature sensors installed in flush boxes have a longer response time to thermal variations. In extreme cases they detect the radiant heat of the wall even if the air temperature in the room is lower for example. The quicker the dynamics of the wall (temperature acceptance of the wall) or the longer the selected inquiry interval of the temperature sensor is the smaller the deviations limited in time are.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ($\pm 0,2$ V) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of the NOVOSapp software and an optional Bluetooth interface. (additionally with sensors with BUS interface via an appropriate software variable).

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» APPLICATION NOTICE FOR HUMIDITY SENSORS

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy.

When exposed to high ambient temperature and/or high levels of humidity or presence of aggressive gases (i.e. chlorine, ozone, ammonia) the sensor element may be affected and re-calibration may be required sooner than specified. Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

» **INFORMATION ABOUT SELF-CALIBRATION FEATURE CO2**

Virtually all gas sensors are subject to some sort of drift. The degree of drift is partially dependent on the use of quality components and good design. But even with good components and excellent design, a small amount of drift can still occur in the sensor that may ultimately result in the need for a sensor to be recalibrated. The natural drift of the sensor is caused by:

- **Dust/dirt** • **Aggressive chemicals absorbed inside chamber / optical elements** • **Corrosion inside chamber (high rh, condensation)** • **Temperature cycles causing mechanical stress** • **Electron/hole migration in the photo detector’s semiconductor** • **Drift of photo amplifiers** • **External mechanical stress on chamber** • **Light source wear-off**

Most of the effects listed above will be compensated by the automatic self-calibration of the sensor’s dual channel technology. In contrast to commonly used ABC-Logic self-calibrating sensors with dual channel technology are suitable for all applications including those operating 24 hours, 7 days a week, for example hospitals. However some effects cannot be compensated automatically and may result in a very gradual natural drift of a few ppm per month. This natural drift is not covered by Thermokon’s 5-year warranty.

» **INFORMATION ABOUT INDOOR AIR QUALITY CO2**

EN 13779 defines several classes for indoor air quality:

Category	CO ₂ content above the content in outdoor air in ppm		Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400.. 600 ppm	500 ppm	Standard indoor air quality
IDA3	600.. 1.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

» **APPLICATION NOTICE FOR AIR QUALITY SENSORS VOC**

Unlike CO2 sensors, which specifically measure CO2, mixed gas sensors detect a wide range of gases. The sensor signal does not indicate the type of gas or it’s concentration in ppm. Mixed gas sensors detect gases and vapours consisting of carbohydrates, or more generally gases that can be oxidised (burnt): Odours, perfume, cleaning fluid scent, tobacco smoke, new materials fumigations (furniture, carpets, paint, glue ...).

Unlike CO2, which humans cannot sense, the amount of odours (VOC) indicates the level of air quality. VOC sensors have proven their value in a multitude of applications for many years.

Measuring principle:

A heated tin dioxide semiconductor sensor burns (oxidizes) organic molecules that come into contact with it, thereby changing the resistance of the semiconductor. The change in resistance is characteristic for the type and concentration of the molecules. Gas mixtures such as air produce a mixed signal that can not be deduced from individual components. CO2 can not be detected because it can not be burned.

Refrain from touching the sensor’s element sensitive surface. Touching the sensitive surface element will void warranty.

» **INFORMATION ABOUT CALIBRATION VOC**

Similar to a catalyst, the sensitivity of the sensor decreases over time. The VOC sensor compensates for this decrease in sensitivity through regular auto-calibration.

The measured values are recorded over a period of 24 hours. The lowest value within this period is used as the reference value ("new zero level") for clean, fresh air. Measured thereafter, lower readings result in an immediate adjustment of the reference value.

» **PRODUCT TESTING AND CERTIFICATION**



Declaration of conformity

The declaration of conformity of the products are found on our website <https://www.thermokon.de/>.

» TECHNICAL DATA

Measuring values (optional)	Temperature (humidity) (CO2) (VOC)
Network technology	RS485 BACnet
Power supply	15..35 V = (or 19..29 V ~)* SELV
Power consumption	typ. 0,4 W (24 V =) 0,8 VA (24 V ~)
Inputs	1x input for floating input
Set point (INC)	Encoder for set point adjustment, heating and cooling, with pushbutton function for ECO Mode
Button (T) (optional)	for presence detection, with LED (TD), or for fan stage adjustment
LED (D) (optional)	for status feedback, color can be set (from 7 colours) via BUS
Control functions	INC ECO: temperature- setpoint adjustment, ECO mode INC TD ECO: temperature- setpoint adjustment, presence detection, ECO mode INC FS5 ECO: temperature- setpoint adjustment, fan stage adjustment, ECO mode
Enclosure	PC V0, pure white
Protection	IP20 according to DIN EN 60529
Cable entry	rear entry, breaking points bottom, drill mark top
Connection electrical	tool-free mountable spring terminal, max. 1,5 mm ²
Ambient condition	-20..+70 °C, max. 85% non-condensing, with CO2 or VOC sensor operating temperature range 0..+50 °C
Mounting	surface mounted on flush-mounting box (Ø=60 mm) or to be mounted flat onto the surface using screws, base part can be mounted and wired separately

» Temperature

Measuring range temperature	-20..+70 °C
Accuracy temperature	±0,5K (typ. at 21 °C)

» Humidity (optional)

Measuring range humidity (optional configurable)	relative humidity (default) 0..100% rH	Enthalpy 0..85 KJ/kg	absolute humidity 0..50 0..80 g/m ³ ,	dew point 0..+50 -20..+80 °C,
	configurable via Thermokon NOVOSapp or BUS			
Accuracy humidity	±2% between 10..90% rH (typ. at 21 °C)			

» CO2 (optional)

Measuring range CO2	0..2000 ppm 0..5000 ppm (configurable via Thermokon NOVOSapp or BUS)
Accuracy CO2	±50 ppm +3 % of reading (typ. at 21 °C, 50% rH, 1015 hPa)
Calibration	self-calibration dual channel
Sensor	NDIR (non-dispersive, infrared)

» VOC (optional)

Measuring range VOC	0..100 %
Calibration	self-calibration
Sensor	VOC sensor (heated metal oxide semiconductor)

*Power supply

When several BUS devices are supplied by one 24 V AC voltage supply, it is to be ensured that all "positive" operating voltage input terminals (+) of the field devices are connected with each other and all "negative" operating voltage input terminals (-) (=reference potential) are connected together (in-phase connection of field devices).

In case of reversed polarity at one field device, a supply voltage short-circuit would be caused by that device. The consequential short-circuit current flowing through this field may cause damage to it.

Therefore, pay attention to correct wiring.


» MOUNTING ADVICES

Please make sure that the device is de-energized if you want to install it!


The installation can be performed on the flat wall surface or on a flush-mounted box. A representative place should be selected. Sunshine and draft, e.g. in the installation tube should be avoided, so that the measurement result is not falsified. Seal the end of the installation tube.

- For wiring, the upper part of the device must be removed from the base plate. Base plate and upper part are detachably connected to each other by means of locking lugs.
- The mounting of the base plate on the flat wall surface is done with rawplugs and screws.
- Finally, the device is attached to the base plate and fixed with the screw.

Housing open / close

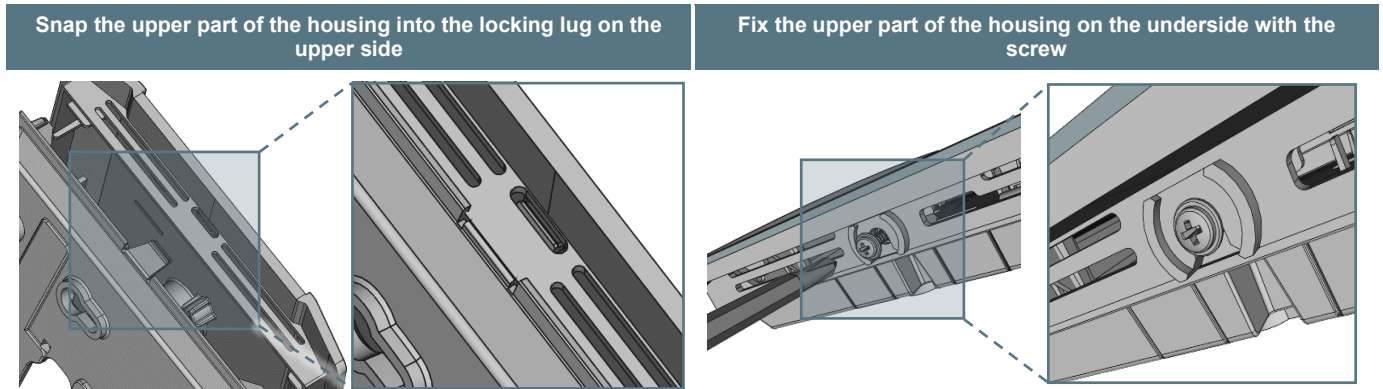


Cable entry

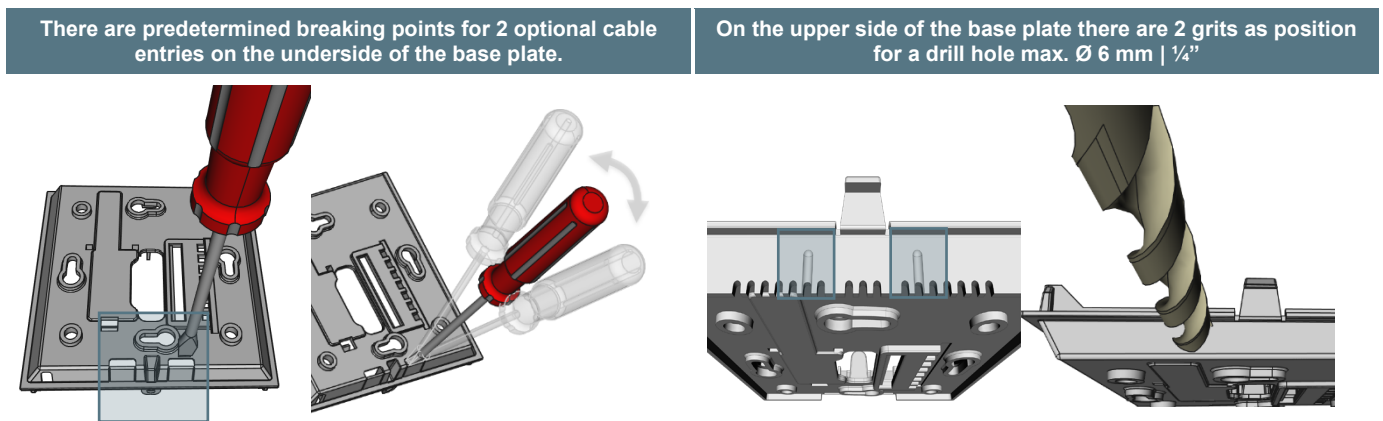

When using a drill, absolutely ensure that the base plate is firmly clamped. Before drilling, the pressure must be reduced and carefully drilled. A sudden break-through of the drill bit can be the result.

» CONNECTION PLAN


Room operating unit – active RS485 BACnet

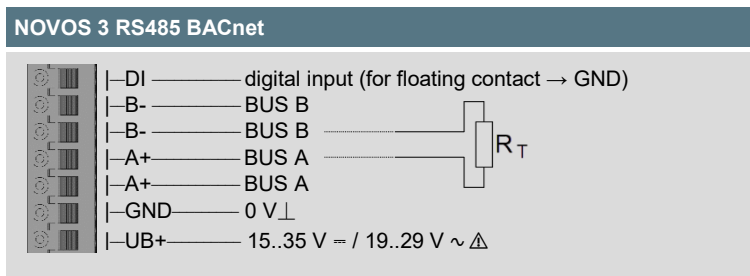

With alternating voltage, the correct polarity must be ensured! Please note the technical data.


Don't forget the BUS termination (120 Ω) at the last device of the line! (Not included in delivery)

» CONFIGURATION

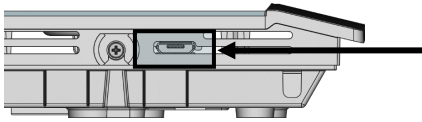

Position of the micro USB port, see bottom of the device, for configuration with Bluetooth dongle or Micro-USB programming interface

The configuration is performed in powered state. The following options are available for configuring the device:

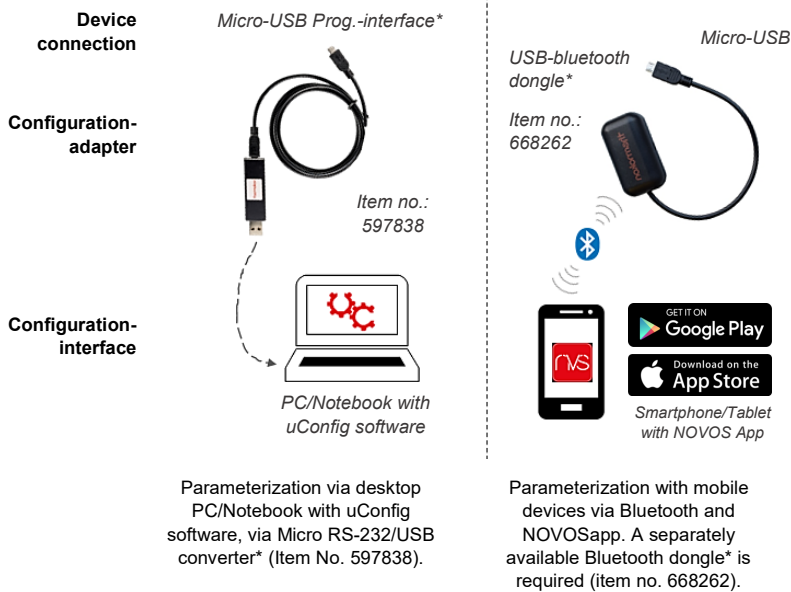


*Commercially available Bluetooth dongles or USB to Micro-USB adapter cables are not compatible. You need a mobile device that supports at least Bluetooth version 4.1. The configuration app with the corresponding instructions can be downloaded from the Google Play Store or the Apple App Store.

» DIP-SWITCH-SETTINGS

The BACnet address of the device is set in the range of 1 ... 127 (binary encoded) using a 7-pole DIP switch.


BACnet-Address - DIP 1..7 (binary coded)

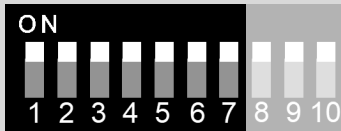

Dip switch	1 = on	2 = on	3 = on	4 = on	5 = on	6 = on	7 = on
Value	2 ⁰ (1)	2 ¹ (2)	2 ² (4)	2 ³ (8)	2 ⁴ (16)	2 ⁵ (32)	2 ⁶ (64)

Factory default, Adress 127

Baud rate - DIP 8..10

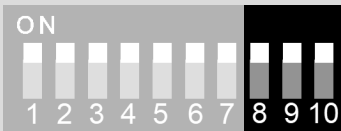

8	9	10	Baud rate
off (on)	off (on)	off (on)	9600 (factory default)
on	off	off	19200
off	on	off	38400
on	on	off	57600
off	off	on	76800
on	off	on	115200

» CONTROL FUNCTIONS

In the factory default settings, the brightness of all LEDs during an interaction is 100%. After a configurable time, the LEDs change into standby mode and the brightness is dimmed down to a configurable value until the next interaction.

Address/Access	Description	Factory default	Resolution /Unit	
FILE_TRANSFER	Brightness of LEDs in active state (interaction)	100=100% (default)	1.0	%
FILE_TRANSFER	Brightness of the LEDs in standby mode	100=100% (default)	1.0	%
FILE_TRANSFER	Change to standby mode after x seconds	120=120 Sec. (default)	1.0	Sec.

NOVOS 3 INC TD | Button for room occupancy

Pressing the button switches the room occupancy. As status feedback, the push-button LED can be switched on when the room is occupied.

Obj. Typ	Inst.-no.	Description
BI	100	Room occupancy 0 = unoccupied 1 = occupied
FILE_TRANSFER		Room occupancy after Power-On Reset 0 = unoccupied 1 = occupied (default)
MV	426	LED-behavior 0 = LED Off 1 = LED On 2 = Room occupancy (occupied = LED On unoccupied = LED Off)
MV	427	Button LED color 1 = white 2 = LED Off 3 = red 4 = green 5 = blue 6 = yellow 7 = magenta 8 = turquoise

NOVOS 3 INC ECO



NOVOS 3 INC TD




NOVOS 3 INC FS5



7 LEDs indicate the status of the currently adjusted setpoint. The LED display scales automatically to the set setpoint adjustment range.

Example: Coloring of the LEDs

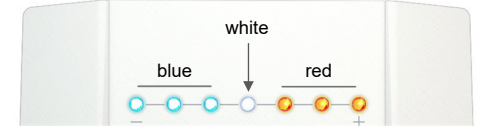

Rotary/press encoder


One control element with 2 functions. The target value can be adjusted by turning.

Obj. Typ	Inst.-no.	Description
AI	103	Setpoint (effective) 210 = 21,0 °C /°F
FILE_TRANSFER		Base setpoint 210 = 21,0 °C /°F (default)
FILE_TRANSFER		Set point adjustment range 30 = ±3,0 °C/°F (default) <i>It makes sense to adapt the setpoint adjustment range of the NOVOS 3 INC to the number of LEDs.</i>
FILE_TRANSFER		Sollwert Sprungweite 5 = 0,5 °C (default)

Press to activate/deactivate the ECO function. It is no longer possible to adjust the setpoint or fan levels in the active ECO mode. In ECO mode, the adjusted setpoint offset is retained and the fan stage switches to automatic mode.

Obj. Typ	Inst.-Nr.	Description
BI	101	ECO function 0 = not active 1 = active

In ECO mode the color of the basic setpoint LED and the auto fan level LED changes to green.

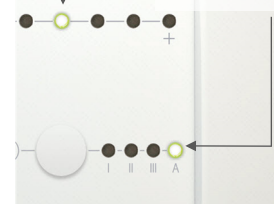


NOVOS 3 INC TD FS5 | Button for fan stages

Press the key to set the fan level. The individual fan levels are "toggled".

Obj. Typ	Inst.-no.	Description
MV	104	Fan stage 0 = Off 1 = Stage 1 2 = Stage 2 3 = Stage 3 6 = Stage Auto
FILE_TRANSFER		Fan stage Auto available 0 = no 1 = yes (default)
FILE_TRANSFER		Fan stage after Power-On Reset 0 = Off 1 = Stage 1 2 = Stage 2 3 = Stage 3 6 = Stage Auto

Example: Coloring of the LEDs

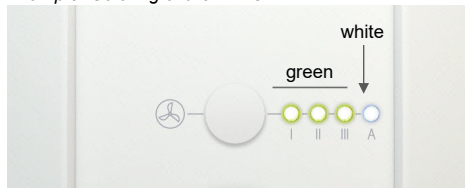


» **OBJEKT-DESCRIPTION**

Obj. Type	Inst.-No	Objekt name	Unit configurable via <File Transfer>	
			SI	IMP
AI	500	Temperatur	°C	°F
AI	501	relative humidity	%rF	
AI	502	absolute humidity	g/m ³	gr/ft ³
AI	503	Enthalpy	kJ/kg	BTU/lb
AI	504	Dew point	°C	°F
AI	505	CO2	ppm	
AI	506	VOC	%	
AI	507	CO2 / VOC MIX	%	
BI	514	Status digital input	1 ON / 0 OFF	
AI	103	Set point (Base setpoint + setpoint adjustment)	°C	°F

» **BACnet Objects, PICS und BIBBs**

NOVOS-RS485 BACnet Interface

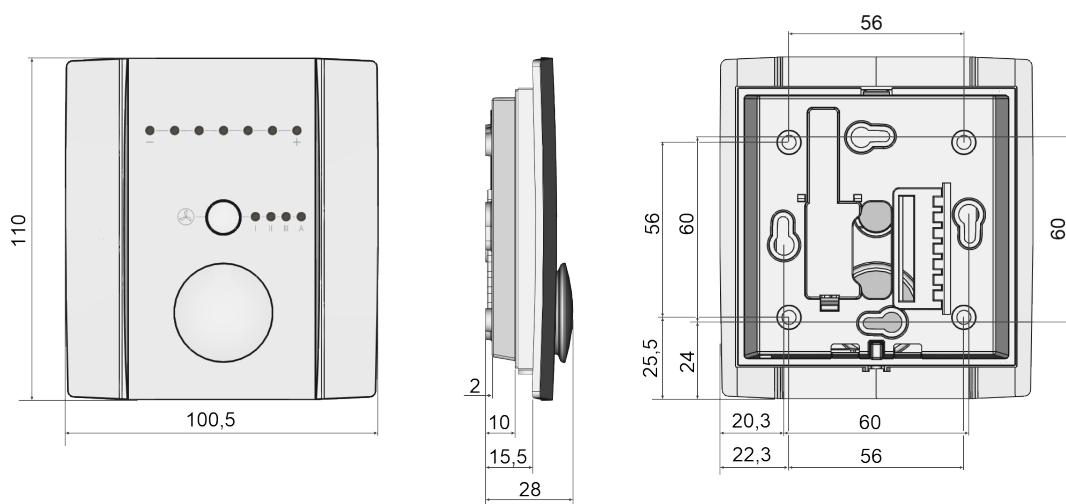A detailed description of the BACnet interface can be found under the following link: → [Download](#)» **DIMENSIONS (MM)**» **ACCESSORIES (OPTIONAL)**

Dowel and screws (2 pcs. each)

Frame for surface mounting NOVOS 3

PSU-UP24 – flush mount power supply 24 V (AC Input: 100..240 V ~ | DC Output 24 V = 0,5 A)

Bluetooth dongle

Programm. Interface USB – Micro-USB

Item No. 102209

Item No. 111584

Item No. 645737

Item No. 668262

Item No. 597838