

» WRF04 CO2 RS485 Modbus

Combined room sensor CO2 optional temperature and humidity

thermokon®
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alteration
Issue date: 13.11.2019 • A100



LON
LOCAL OPERATING NETWORK

» APPLICATION

Room sensor for detecting CO2 content and optionally temperature and humidity. The maintenance-free sensor creates the conditions for a pleasant room climate and increased well-being. Typical applications are schools, office buildings, hotels, cinemas and similar. The device is additionally available with LED display (traffic light function), LCD and relay output with adjustable threshold values. The device is mounted directly on the wall, on a flush-mounted box or in conjunction with a frame for surface-mounting (see accessories).

» TYPES AVAILABLE

Room sensor CO2 + temperature – active LON

WRF04 CO2 LON
WRF04 CO2 LON LCD
WRF04 CO2 LON TLF
WRF04 CO2 LON LCD TLF

Room sensor CO2 + temperature +relative humidity – active LON

WRF04 CO2 rH LON
WRF04 CO2 rH LON LCD
WRF04 CO2 rH LON TLF
WRF04 CO2 rH LON LCD TLF

» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity

The declaration of conformity of the products can be found on our website <https://www.thermokon.de/>.

» SECURITY ADVICE – CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» REMARKS TO ROOM SENSORS

Location and Accuracy of Room Sensors

The room sensor should be mounted in a suitable location for measuring accurate room temperature. The accuracy of the temperature measurement also depends directly on the temperature dynamics of the wall. It is important, that the back plate is completely flush to the wall so that the circulation of air occurs through the vents in the cover. Otherwise, deviations in temperature measurement will occur due to uncontrolled air circulation. Also the temperature sensor should not be covered by furniture or similar devices. Mounting next to doors (due to draught) or windows (due to colder outside wall) should be avoided.

The temperature dynamics of the wall will influence the temperature measurement. Various wall types (brick, concrete, dividing and hollow brickwork) all have different behaviours with regards to thermal variations.

Surface and Flush Mounting

The temperature dynamics of the wall influence the measurement result of the sensor. Various wall types (brick, concrete, dividing and hollow brickwork) have different behaviours with regard to thermal variations. A solid concrete wall responds to thermal fluctuations within a room in a much slower way than a light-weight structure wall. Room temperature sensors installed in flush boxes have a longer response time to thermal variations. In extreme cases they detect the radiant heat of the wall even if the air temperature in the room is lower for example. The quicker the dynamics of the wall (temperature acceptance of the wall) or the longer the selected inquiry interval of the temperature sensor is the smaller the deviations limited in time are.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ($\pm 0,2$ V) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» APPLICATION NOTICE FOR HUMIDITY SENSORS

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy.

When exposed to high ambient temperature and/or high levels of humidity or presence of aggressive gases (i.e. chlorine, ozone, and ammonia) the sensor element may be affected and re-calibration may be required sooner than specified. Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

»INFORMATION ABOUT INDOOR AIR QUALITY CO₂

EN 13779 defines several classes for indoor air quality:

| Category | CO ₂ content above the content in outdoor air in ppm | | Description |
|----------|---|----------------|-----------------------------|
| | Typical range | Standard value | |
| IDA1 | <400 ppm | 350 ppm | Good indoor air quality |
| IDA2 | 400.. 600 ppm | 500 ppm | Standard indoor air quality |
| IDA3 | 600..1.000 ppm | 800 ppm | Moderate indoor air quality |
| IDA4 | >1.000 ppm | 1.200 ppm | Poor indoor air quality |

»INFORMATION ABOUT SELF-CALIBRATION FEATURE CO₂

Virtually all gas sensors are subject to some sort of drift. The degree of drift is partially dependent on the use of quality components and good design. But even with good components and excellent design, a small amount of drift can still occur in the sensor that may ultimately result in the need for a sensor to be recalibrated.

The natural drift of the sensor is caused by:

- Dust/dirt • Aggressive chemicals absorbed inside chamber / optical elements • Corrosion inside chamber (high rh, condensation) • Temperature cycles causing mechanical stress • Electron/hole migration in the photo detector's semiconductor • Drift of photo amplifiers • External mechanical stress on chamber • Light source wear-off

Most of the effects listed above will be compensated by the automatic self-calibration of the sensor's dual channel technology. In contrast to commonly used ABC-Logic self-calibrating sensors with dual channel technology are suitable for all applications including those operating 24 hours, 7 days a week, for example hospitals.

However some effects cannot be compensated automatically and may result in a very gradual natural drift of a few ppm per month. This natural drift is not covered by Thermokon's 5-year warranty.

»TECHNICAL DATA

| | | | |
|---------------------------------|--|--|--|
| Measuring values | CO ₂ , temperature, humidity | | |
| Network technology | LON-FT | | |
| Power supply | 15..24 V = (±10%) or 24 V~ (±10%) SELV | | |
| Power consumption | max. 3 W (24 V = 6 VA (24 V =) | | |
| Measuring range temperature | 0..+50 °C | | |
| Measuring range humidity | 0..100% rH non-condensing | | |
| Measuring range CO ₂ | 0..2000 ppm | | |
| Accuracy temperature | ±1% of measuring range (typ. at 21 °C) | | |
| Accuracy humidity | ±2% between 10..90% rH (typ. at 21 °C) | | |
| Accuracy CO ₂ | ±75 ppm or 10% of measuring range (typ. at 21 °C), whatever is greater | | |
| Calibration | self-calibration, dual channel | | |
| Sensor | NDIR (non-dispersive, infrared) | | |
| Display (optional) | LCD 29x12 mm, monochrome | TLF 3 LEDs showing air quality (traffic light function) | |
| Enclosure | PC, pure white | | |
| Protection | IP30 according to EN 60529 | | |
| Cable entry | breaking points top/bottom, entry on rear | | |
| Connection electrical | terminal block max. 1,5mm ² | | |
| Ambient condition | 0..+50 °C, max. 85% rH non-condensing | | |
| Mounting | to be mounted flat onto the surface using adhesive foil or screws | | |

» MOUNTING ADVICES

Make sure that the device is power-off, if you install it!


The device can be installed on a smooth wall surface or a flush box. A representative location for room temperature without direct insolation should be selected for the device.

The use of deep installation boxes is recommended due to increased storage capacity for the wires. Empty tubes have to be sealed to avoid air draught from the installation tube.


(1) For wiring, the upper part of the base plate has to be removed. Base plate and upper part are connected via snap tab located in the middle of the enclosure bottom.

(2) The installation of the base plate to the smooth wall surface can be done either by sticking using the enclosed adhesive film (A) as well as using plugs and screws.

(3) Finally the device is clicked into the base plate.

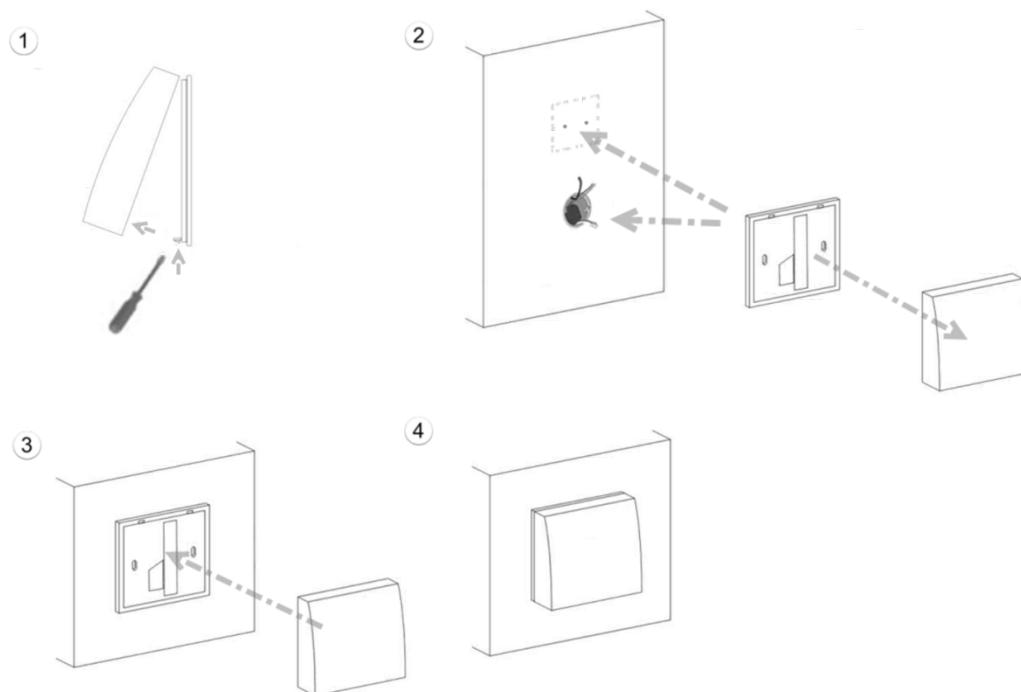

» CONNECTION PLAN

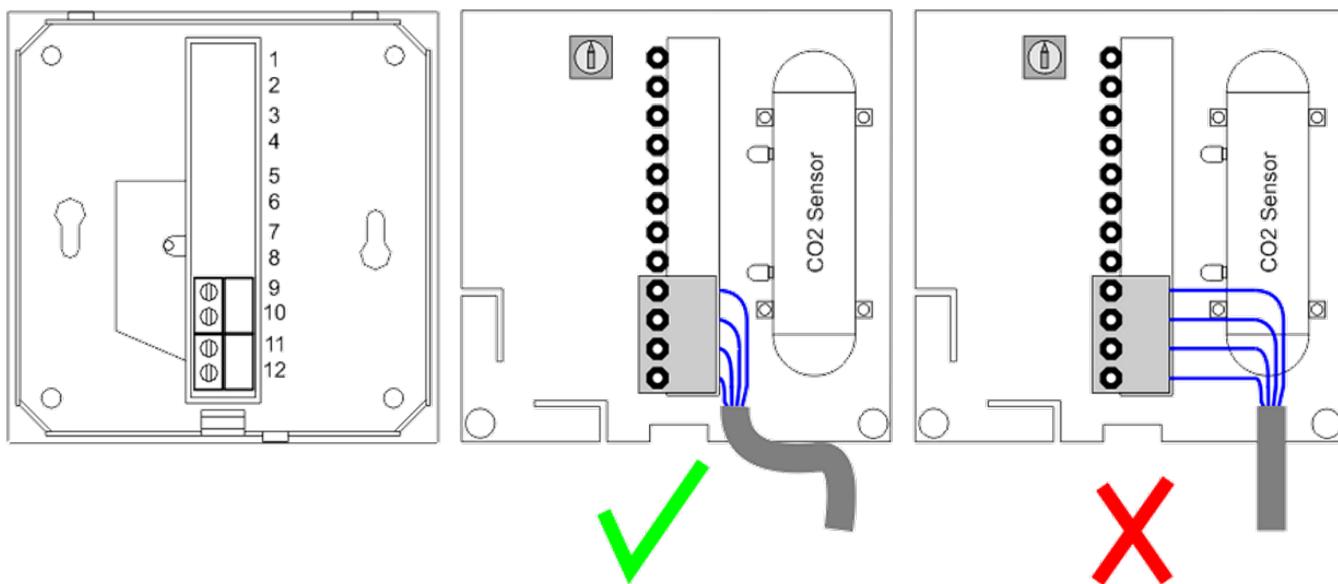

Note:


Avoid laying the cable on the CO₂ sensor, because this may damage the device and influence the measuring values.

| Clamp | Description |
|-------|-------------|
| 9 | + Uv / AC 1 |
| 10 | GND / AC 2 |
| 11 | Net B |
| 12 | Net A |

» TLF - TRAFFIC LIGHT FUNCTION (OPTIONAL)

The 3 LEDs visualize the air quality

| CO ₂ | Behavior of the LEDs |
|-----------------|----------------------|
| 0..750 ppm | green LED lights up |
| 751..1250 ppm | yellow LED lights up |
| 1251..2000 ppm | red LED lights up |

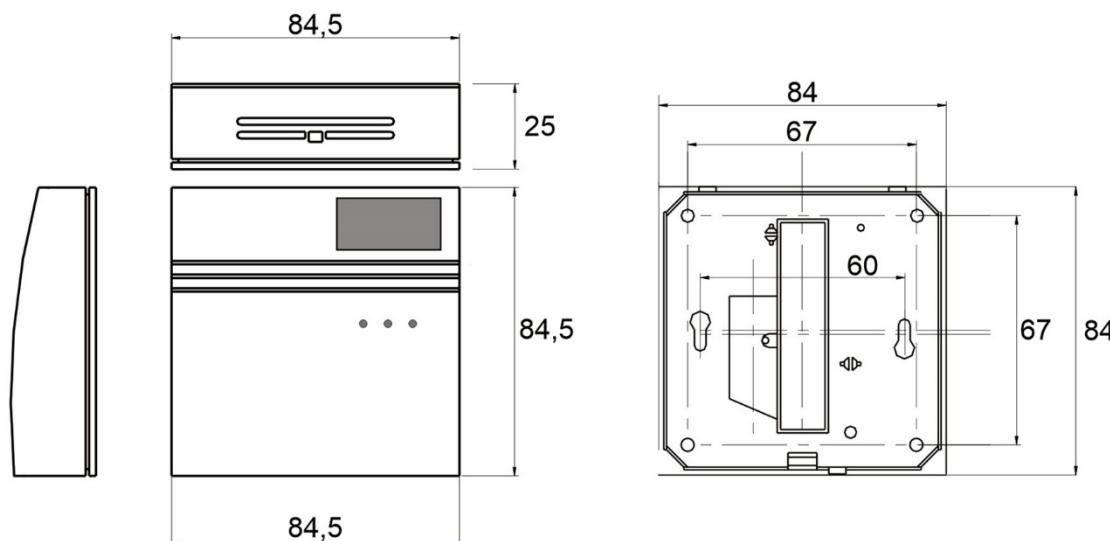» DIMENSIONS (MM)**» ACCESSORIES (OPTIONAL)**

Rawl plugs and screws (2 pcs. each)
 Frame for surface mounting WRF04
 Ball stroke protection BS100

Item No.: 102209
 Item No.: 111584
 Item No.: 103312