

» FTW06 dS

Flush mounting room sensor for relative humidity and temperature

thermokon[®]
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alteration
Issue date: 19.07.2019 • A100



» APPLICATION

The device is used to record the current room temperature and humidity and provides the digitalSTROM heating control with the measured values automatically. Thus, the sensor is part of the digitalSTROM system. In combination with the respective system and smartphone apps, comfortable room temperature control takes place, which can be operated conveniently at home or while on the move.

» SECURITY ADVICE – CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.



CAUTION! Risk of electric shock due to live components within the enclosure, especially devices with mains voltage supply (usually between 90..265 V).

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

Follow the planning and installation instructions in the digitalSTROM installation manual for the installation and initial operation.

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. This dissipative power has to be considered when measuring temperature. If a re-calibration should become necessary later directly on the sensor, this can be done by means of the configuration interface of the digitalStrom Server.

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» REMARKS TO ROOM SENSORS

Location and Accuracy of Room Sensors

The room sensor should be mounted in a suitable location for measuring accurate room temperature. The accuracy of the temperature measurement also depends directly on the temperature dynamics of the wall. It is important, that the back plate is completely flush to the wall so that the circulation of air occurs through the vents in the cover. Otherwise, deviations in temperature measurement will occur due to uncontrolled air circulation. Also the temperature sensor should not be covered by furniture or similar devices. Mounting next to doors (due to draught) or windows (due to colder outside wall) should be avoided.

The temperature dynamics of the wall will influence the temperature measurement. Various wall types (brick, concrete, dividing and hollow brickwork) all have different behaviours with regards to thermal variations.

Surface and Flush Mounting

The temperature dynamics of the wall influence the measurement result of the sensor. Various wall types (brick, concrete, dividing and hollow brickwork) have different behaviours with regard to thermal variations. A solid concrete wall responds to thermal fluctuations within a room in a much slower way than a light-weight structure wall. Room temperature sensors installed in flush boxes have a longer response time to thermal variations. In extreme cases they detect the radiant heat of the wall even if the air temperature in the room is lower for example. The quicker the dynamics of the wall (temperature acceptance of the wall) or the longer the selected inquiry interval of the temperature sensor is the smaller the deviations limited in time are.

» APPLICATION NOTICE FOR HUMIDITY SENSORS

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy.

When exposed to high ambient temperature and/or high levels of humidity or presence of aggressive gases (i.e. chlorine, ozone, ammonia) the sensor element may be affected and re-calibration may be required sooner than specified. Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity


The declaration of conformity of the products can be found on our website <https://www.thermokon.de/>.

» TECHNICAL DATA


Measuring values	temperature, humidity
Network technology	digitalSTROM (dS)
Power supply	230 V ~ (±10%)
Power consumption	typ. 1 W max. 0,04 A (230 V ~)
Measuring range temp.	0..+40 °C
Measuring range humidity	0..95% rH non-condensing
Accuracy temperature	±0,5 °K (typ. at 21 °C)
Accuracy humidity	±2% between 10..90% rH (typ. at 21 °C)
Enclosure	PC V0, pure white
Protection	IP20 according to EN 60529
Connection electrical	plug-in terminal max. 2,5 mm ²
Ambient condition	0..+40 °C, max. 85% rH non-condensing
Weight	approx. 80 g
Mounting	flush mounted in standard EU box (Ø=60 mm, min. depth=45 mm)
Notes	* in switch program with intermediate frame, please specify frame design when ordering

» MOUNTING ADVICES

The device is designed for mounting on a flush box. The bus cable is connected to the device by a plug-in terminal. For pre-wiring, the plug-in terminal can be drawn from the device cable. Due to the extended retaining capacity for the cabling, the use of deep installation boxes is recommended. The end of the installation tube in the flush box must be sealed to avoid any draught in the tube falsifying the measuring result.

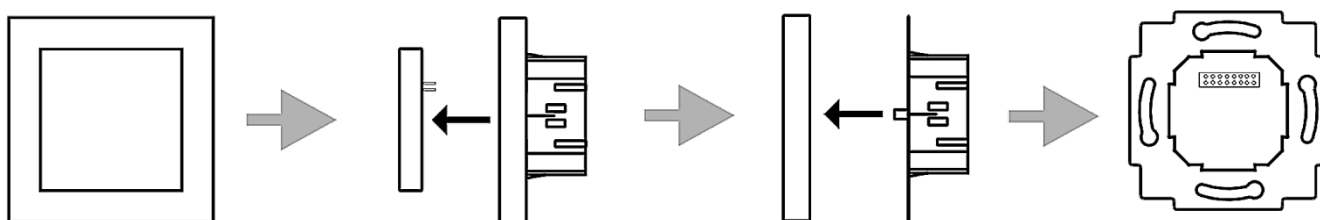

» CONNECTION PLAN

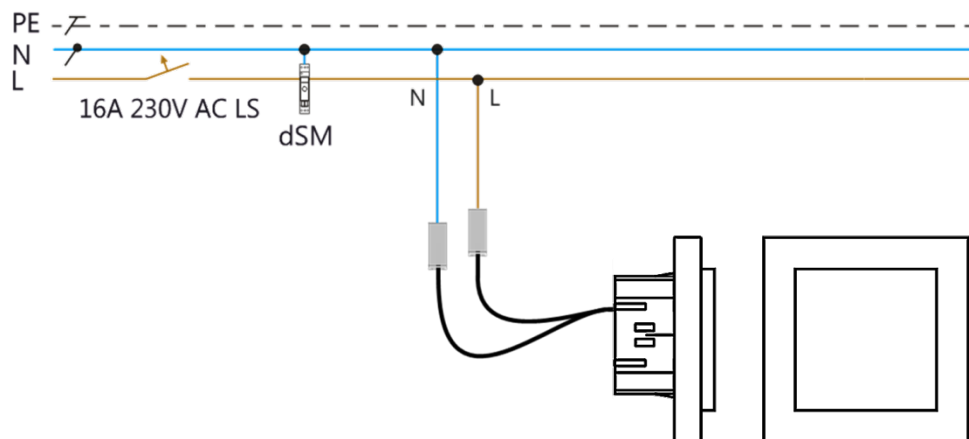

After the electrical connection has been established and the power switched on, the device is automatically registered at the digitalSTROM meter in the electric circuit distributor. The device is then immediately ready for operation, begins with the recording of the room temperature and humidity and registers these in the digitalSTROM system.



To use the full range of functions of the product, a system update must be carried out. See digitalSTROM installation manual.

After switching on the supply voltage, the device is first initialized. This initialization takes about two hours until the correct values will be displayed. The initialization status can be queried via the configuration interface of the digitalSTROM system.

» DIMENSIONS (MM)

